

# FIRE ALARM INSTRUCTIONS

If the bells are ringing press **SILENCE & ENTER** button and then if asked for code enter **1111 & ENTER** button

---

If the trouble sounder is on press **SILENCE & ENTER** button and then if asked for code enter **1111 & ENTER** button

---

Technical Assistance 967.6200

Monitoring by Alarm Central 800.452.3555

---

- Zone # 01 - **FIRE** - Taqueria Alonzo's Suppression System (hood)
- Zone # 02 - **FIRE**
- Zone # 03 - Basement North **Water Flow**
- Zone # 04 - Basement South **Water Flow**
- Zone # 05 - 1st Floor North **Water Flow**
- Zone # 06 - 1st Floor South **Water Flow**
- Zone # 07 - 2nd Floor North **Water Flow**
- Zone # 08 - 2nd Floor South **Water Flow**
- Zone # 09 - 2nd Floor South Hall **Smoke Detection**
- Zone # 10 - 2nd Floor Northeast **Smoke Detection**
- Zone # 11 - 2nd Floor North **Smoke Detection**
- Zone # 12 - 2nd Floor Northwest **Smoke Detection**
- Zone # 13 - 1st Floor Elevator Lobby **Smoke Detection**
- Zone # 14 - Basement Elevator Lobby **Smoke Detection**
- Zone # 15 - **FIRE** - FACP **Smoke Detector**
- Zone # 16 - **FIRE**